
Quadro Features on Epygi's Supported IP Phones List



Revision: 1.0

Abstract: This document describes how to use the Quadro IP PBX telephony features on the supported IP phones.

Table of Contents:

1	Introduction.....	5
2	IP Phone Testing Policy	5
3	References	5
4	Requirements and Preparations	5
5	Supported SIP Phones	6
6	Future IP Phone List	6
7	SIP Phone Support Definitions	7
8	Quadro Features on Supported IP Phones.....	7
9	Limitations and Differences for the Supported IP Phones .	8
10	Quadro Feature Codes on Supported IP Phones	9
11	Quadro PBX Services Accessible during a call	10
11.1	Snom300 SIP Phone.....	10
11.1.1	Limitations Specific to Snom300	10
11.1.2	Features Codes on Snom300	10
11.2	Snom320.....	12
11.2.1	Limitations Specific to Snom320	12
11.2.2	Features Codes on Snom320	12
11.3	Snom360.....	13
11.3.1	Limitations Specific to Snom360	13
11.3.2	Features Codes on Snom360	13
11.4	Aastra480i.....	15
11.4.1	Limitations Specific to Aastra480i.....	15
11.4.2	Feature Codes on Aastra480i.....	15
11.5	Aastra 9112i	17
11.5.1	Limitations Specific to Aastra9112i.....	17
11.5.2	Feature Codes on Aastra9112i	17
11.6	Aastra 9133i	19
11.6.1	Limitations Specific to Aastra9133i.....	19
11.6.2	Feature Codes on Aastra9133i	19
12	Appendix 1	21
12.1	Establishing a call	21
12.2	PBX Services Accessible at the Dial Tone	21
12.2.1	To Use Busy Auto-redial	22
12.2.2	To Call Back.....	22

- 12.2.3 To Activate Forwarding Service 22
- 12.2.4 To Switch Do Not Disturb Mode..... 22
- 12.2.5 To Block Last Caller..... 23
- 12.2.6 Call Routing Management 23
- 12.2.7 Voice Mail Services 23
- 12.3 Feature Codes on Auto Attendant..... 26
 - 12.3.1 Administrator Login..... 27

Document Revision History

Revision	Date	Description	Valid for models
1.0	15-Jan-07	Split from the Using Quadro Features on IP Phones document	IP PBXs

1 Introduction

This document describes the Quadro IP PBX telephony services and features on the supported IP phones list and it provides the feature codes for these phones.

The features and feature codes described in this document are functional regardless of whether the IP phone is connected to the Quadro IP PBX locally when the phone is configured as a local IP extension or remotely when the phone is configured as a remote extension.

2 IP Phone Testing Policy

In order to maintain compatibility between Epygi IP PBX products and 3rd party IP phones, Epygi will periodically review the available released phone SW from the vendor and test this SW against the IP PBX products for functional compatibility. This review is done for each phone at a minimum of four times per year. Based on the results, the SW may or may not be recommended for use, with or without functional restrictions. Epygi will focus on a phone SW image that maximizes the functionality of the Epygi IP PBX products rather than testing for the latest release. It is possible that the recommended IP phone SW is not the latest released. The testing of the IP phones is done with regards to the functionality and services of the Quadro, and not the independent features of the particular model. Epygi will deviate from this policy on a case-by-case basis and will accelerate testing of a particular IP phone model or SW release when necessary.

Epygi reserves the right to eliminate or add new IP phones from the supported list at anytime due to market or technical reasons.

3 References

- Quadro Manual-II: Administrator's Guide for the corresponding release.
- Quadro Manual III: Extension User's Guide for the corresponding release.
- IP Phones and IP Lines Configuration Guide.

4 Requirements and Preparations

- Software 3.1.x or higher is running on the Quadro IP-PBX.
- Quadro IP-PBX is connected to the network and all network settings are properly configured.
- IP phones are connected to the Quadro IP PBX, powered up and appropriately configured.

5 Supported SIP Phones

The following SIP Phones are supported by Epygi.

Vendor	Model	Software Version
Aastra	480i	Firmware Version: 1.4.1.1077
Aastra	9112i	Application version: 1.4.1.1077
Aastra	9133i	Application version: 1.4.1.1077
Snom	300	Application-Version: snom300-SIP 6.5.1
Snom	320	Application: snom320-SIP 6.5.1
Snom	360	Application: snom360-SIP 6.5.1

6 Future IP Phone List

The following phones and releases are currently under consideration for testing:

IP Phone Model	Firmware Version	Test Completion Date
Snom 300	6.5.2	15-Jan-2006
Snom 320	6.5.2	15-Jan-2006
Snom 360	6.5.2	15-Jan-2006

The following phones are currently under consideration for being supported:

Vendor	Model	Software Version
Aastra	53i	
Aastra	55i	
Aastra	57i	

7 SIP Phone Support Definitions

Support is defined by the testing level and support commitment by Epygi. Epygi and the SIP IP Phone manufacturer will be working together to create a feature set and implementation strategy for the supported models. The feature set will be unique only for the two parties involved.

The SIP Phone support allows the partners to attain flexibility for future feature development.

Support is defined as the following:

- Online and phone support with advanced knowledge of IP Phone.
 - Detailed configuration knowledge of all Epygi tested and supported features
 - Basic IP Phone functionality and setup
 - Detailed knowledge of interoperability limitations
- Configuration guidance from Epygi support staff.
- Extensive regression testing of the features.
- IP Phone firmware control and distribution.
 - Epygi will custom label firmware file names for the Supported endpoints to allow the firmware approved and distributed by Epygi to be uploaded to the IP Phone.
 - Controlled distribution of IP Phone firmware to control the level of firmware uploaded to the IP Phones.

8 Quadro Features on Supported IP Phones

Almost all Quadro IP PBX telephony services and features are applicable on the supported IP phones. Most of them are identical to those on FXS (analogue) phones from the configuration and usage perspective.

The limitations and differences regarding the configuration and functionality on FXS (analogue) phones are listed in [Limitations and Differences](#). The configuration options for telephony services and features are out of scope in this document. For information about the Quadro IP PBX services and features, and their configuration refer to **Manual II-Administrator's Guide** published on Epygi's Technical Support Web Portal. Quadro IP PBX telephony services and features on the supported IP phones are listed below.

- Voice mail system
- Auto-redialling
- Call back to last caller
- Enable/Disable Call forwarding
- Call Park (Alternative)
- Do Not Disturb
- Block Last Caller
- Line Information
- Administrator login

- Call Routing Management
- Incoming Call blocking
- Outgoing Call blocking
- Call forwarding Unconditionally
- Call forwarding If busy
- Call forwarding If No Answer
- Call waiting
- Call hold
- Call park
- 3-way Calling (call conferencing)
- Call pickup
- Speed dialling
- Many extension ringing
- Call hunting
- Caller ID
- Hiding Caller ID
- Hold music
- Call Queue
- User Permissions (Password Protection)
- Call Transfer Blindly
- Call Transfer w/t Consultation
- Paging
- Intercom
- Receptionist

9 Limitations and Differences for the Supported IP Phones

The following Quadro IP PBX services working on FXS (analogue) phones, are not currently working on any supported SIP phones:

- Hotline
- Distinctive ringing (will be implemented in future releases)

The features codes for the following Quadro IP PBX services differ from those on FXS phones and are specific for each supported IP phone. Refer to the chapter 12 for feature codes of these services:

- Call hold
- Call Waiting
- 3-way Calling (call conferencing)

- Call Blind Transfer
- Call Transfer w/t Consultation

Caller ID configuration for IP phones is different from that on FXS (analogue) phones. No special configuration on the Quadro IP PBX is needed for IP phones. This service can be configured on the IP phone only.

The following Quadro IP PBX services are functional on the supported IP phones only:

- Paging (exception is the Aastra480e analogue phone which also supports paging)
- Intercom
- Receptionist (see the document **Receptionist Setup on Quadro** published on Epygi's Technical Support Web Portal).

The following Quadro IP PBX services are working with some limitations or slight differences on SIP phones compared to the way they are working on analogue phones.

The Voice Mail Indication feature is working with the following limitation:

- Voice Mail Indication is activated on the Quadro IP PBX, but the indication type (lamp, tone, or ringing) should be selected on the phone. For more information on the voice mail indication types available on your IP phone and how to activate them, please refer to the User's Manual of the telephone.

The User Password Protection feature is working with the following difference:

- If the User Password Protection is activated on the Quadro for outgoing calls, Quadro will ask for password after dialling the called destination and not upon lifting the handset as it is on analogue phones.

For other Quadro services not supported by an individual SIP phone, refer to **Limitations Specific to the *corresponding* Phone** section below.

Please note: If a particular feature is supported both by the Quadro and the SIP phone, the Quadro's feature must be used. Using a SIP phone's feature not supported by the Quadro is left to the discretion of the user.

10 Quadro Feature Codes on Supported IP Phones

A feature code is a combination of keys dialed on an IP phone connected to the Quadro IP PBX to access its telephony services. Each feature has its own feature code. Quadro IP PBX telephony features are divided into two groups: **PBX** and **Auto Attendant** services.

Each group above has its own hierarchy.

PBX services comprise of the following:

- **PBX services accessible at the dial tone**
- **PBX services accessible during a call.**

The feature codes for **PBX services accessible at the dial tone** and **Auto Attendant services** are the same on different IP phones and identical to those on FXS phones. Refer to [Appendix 1](#) for these codes.

The feature codes for **PBX services accessible during a call** vary on different IP phones (exception is the Call Park). For those codes, please refer to the **Feature Codes for the *corresponding* Phone** in the section below.

11 Quadro PBX Services Accessible during a call

The feature codes for **PBX services accessible during a call** vary depending on the SIP phone. The exception is the Call Park feature, which is common for all IP phones discussed below.

To Park a Call

This service requires initial configuration from the Quadro web management. At least one extension should be configured as a call park extension.

In order to park a call put the call to park on hold by switching to a free line and dial *5. The system will play the extension number and the SIP username of a call park extension. This is usually the first available extension initially configured for call parking.

To retrieve the parked call locally, dial the prompted call park extension number on any phone locally connected to the Quadro. In case of remote access, dial the SIP username of the extension. The system will ask for authentication. Enter the password of the call park extension or press # if the extension does not have a specified password.

Attention: Call Park is valid within the specified timeout, during which hold music (if configured) will be played to the held party. When the Call Park timeout expires, the phone initiating call parking will start ringing, and if the parked call is not picked up, or if the phone is off hook, the parked party will automatically be disconnected.

11.1 Snom300 SIP Phone



11.1.1 Limitations Specific to Snom300

There are no additional limitations except for those mentioned in section [Limitations and Differences](#).

11.1.2 Features Codes on Snom300

This section presents the feature codes for **PBX Services accessible during a call** specific to Snom300 and serves as a supplement to section [Quadro Feature Codes on Supported IP Phones](#).

Please note: The feature codes presented below assume that the Snom300 is in the default configuration, i.e. the programmable keys function as specified by default. If this is not the case, use the programmable keys programmed to have the identical function as indicated for the corresponding feature.

PBX Services accessible during a call	Keys
Call Hold	Free line key (L1 or L2)
Call Waiting	Key with a blinking LED
Call Blind Transfer	Transfer → dial the number → 
Call Transfer with Consultation	Free line key → dial the number →  → consult → Transfer
Call Conference	Press the key programmed for a conference call (Absent in the default configuration)

To Put a Call on Hold

During a call, press a free line key. While a call is on hold, you can make a second call by dialing the desired phone number.

To resume a call on hold, press the 'line' key again.

To Accept an Incoming Call When on a Call


Press the key with a blinking LED. This puts the call in progress on hold and receives an incoming call.

To switch between the calls, use the line key associated with the corresponding call.

To terminate the call in progress and resume the one on hold, press **Cancel**.


To Blind Transfer a Call

During a call, press the **Transfer** key to put the call in progress on hold.

Dial the phone number that the held call is to be transferred to and press . The person on hold will be transferred to the specified destination.

To Transfer a Call with Consultation

During a call, press a free line key to put the active call on hold.

Dial the phone number that the held call is to be transferred to and press the  key. Consult the called party (ie. to announce the call).

Press the **Transfer** key to connect the person on hold to the called party.

To Make a Conference Call

When the phone is connected with two calls, one on hold and one active, press the key programmed as the **Conference** key.

Press this **Conference** key again to disconnect the conference and put each participant on hold.





11.2 Snom320

11.2.1 Limitations Specific to Snom320



There are no additional limitations except for those mentioned in section [Limitations and Differences](#).

11.2.2 Features Codes on Snom320

This section presents the feature codes for **PBX Services accessible during a call** specific to Snom320 and serves as a supplement to section [Quadro Feature Codes on Supported IP Phones](#).

PBX Services accessible during a call	Keys/Soft Keys
Call Hold	
Call Waiting	Key with a blinking LED
Call Blind Transfer	"Xfer" ¹ → dial the number → 
Call Transfer with Consultation	 → dial the number →  → consult → "Xfer"
Call Conference	"Cnf.On"

To Put a Call on Hold

During a call, press the hold key . This puts the call in progress on hold and provides a dial tone on a free line. While a call is on hold, you can make a second call by dialing your desired phone number. To resume a call on hold, press either the hold key  again or the line key associated with the held call.


You can also put a call on hold and immediately receive a dial tone by pressing any free line key.


To Accept an Incoming Call

Press the key with a blinking LED. This puts the call in progress on hold and receives the incoming call.

To terminate the call in progress and resume the one on hold, press **Cancel**.


To Blind Transfer a Call


During a call, press the soft key **"Xfer"** or the transfer key . This puts the call in progress on hold and provides a dial tone.


Dial the phone number that the call is to be transferred to and press . The person on hold will be transferred to the specified destination.

¹ The names of soft keys are taken into inverted commas.

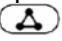
To Transfer a Call with Consultation

During a call, press the hold key . This puts the call in progress on hold and provides a dial tone.

Dial the phone number that the call is to be transferred to and press the key . Consult the second party.

Press the soft key "Xfer" or the transfer key  to connect the person on hold to the called party.

To Set Up a Conference Call

When the phone is connected with two calls, one on hold and one active, press the soft key "Cnf.On"  to connect all three parties for a conference call.

Pressing the function key "Cnf.Off" or  disconnects the conference call and drops the calls.










11.3 Snom360

11.3.1 Limitations Specific to Snom360


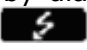
There are no additional limitations except for those mentioned in section [Limitations and Differences](#).

11.3.2 Features Codes on Snom360

This section presents the feature codes for **PBX Services accessible during a call** specific to Snom360 and serves as a supplement to section [Quadro Feature Codes on Supported IP Phones](#).

PBX Services accessible during a call	Keys
Call Hold	
Call Waiting	Key with a blinking LED
Call Blind Transfer	 /  → dial the number → 
Call Transfer with Consultation	 → dial the number →  → consult →  / 
Call Conference	

To Put a Call on Hold

During a call, press the hold key . This puts the call in progress on hold and provides a dial tone on a free line. While a call is on hold, you can make a second call by dialing your desired phone number. To resume the call on hold, press either the flash key  or the line key associated with the held call.

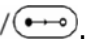
You can also put a call on hold and immediately receive a dial tone by pressing any free line key.


To Accept a Second Incoming Call

Press the key with a blinking LED. This puts the call in progress on hold and receives an incoming call.


To terminate the call in progress and resume the one on hold, press **Cancel**.

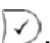
To Blind Transfer a Call



During a call, press the transfer key  / . This puts the call in progress on hold and provides a dial tone.

Dial the phone number that the call is to be transferred to and press . The person on hold will be transferred to the specified destination.


To Transfer a Call with Consultation

During a call, press the hold key . This puts the call in progress on hold and provides a dial tone.

Dial the phone number that the call is to be transferred to and press the key . Consult the second party, i.e. to announce the call.

Press the transfer key  /  to connect the person on hold to the called party.

To Set Up a Conference Call

When the phone is connected with two calls, one on hold and one active, press the conference key .

Pressing the function key  or  disconnects the conference call and puts the calls on hold.

11.4 Aastra480i

11.4.1 Limitations Specific to Aastra480i

There are no additional limitations except for those mentioned in section [Limitations and Differences](#).

11.4.2 Feature Codes on Aastra480i

This section presents the feature codes for **PBX Services accessible during a call** specific to Aastra480i and serves as a supplement to section [Quadro Feature Codes on Supported IP Phones](#).

Please Note: Almost all PBX services described in the **Feature Codes for SIP Phones** section can be accessed by using corresponding soft keys. For example, instead of dialing *74 to get the line information, you can press the soft key "Line info."

PBX Services	Keys / Soft Keys
Call Hold	Hold
Call Waiting	"Pickup" ²
Call Blind Transfer	Xfer → <i>dial the number</i> → "Call" → Xfer
Call Transfer with Consultation	Xfer → <i>dial the number</i> → "Call" → <i>consult</i> → Xfer
Call Conference	Conf → <i>dial the number</i> → "Call" → Conf

To Put a Call on Hold

To put a call in progress on hold, press the **Hold** key on the phone keypad. The LED of the corresponding line key will start blinking, indicating that you have a call on hold.

To resume the call on hold, either press the **"Pickup"** soft key or press the line key with a blinking LED.

While a call is on hold you can make a second call by switching to an available free line: press the corresponding line key. This provides a dial tone on that line enabling you to make a second call.

Please Note: You can put a call on hold and switch directly to another line by pressing a free line key during a call.

To Accept a Second Incoming Call

To accept a second call when you are in a call, either press the line key with a flickering LED or press the **"Pickup"** soft key. Accepting a second call puts the call in progress on hold.

To switch between the calls, use the line keys **L1** to **L4**: press the key with a blinking LED to resume the call on hold and put the current one on hold.

To terminate a second call and return to the held one, press the **"Drop"** then **"Pickup"** soft keys.

To Blind Transfer a Call

Press the **Xfer** key during a call to be transferred. This puts the call in progress on hold and provides a dial tone on an available free line.

² The names of the soft keys are in quotes.

Dial the number that the call is to be transferred and press the soft key **"Dial"**.

Press **Xfer** again when you hear ringing. The party on hold is transferred to the called party.

To Transfer a Call with Consultation

Press the **Xfer** key during a call to be transferred. This puts the call in progress on hold and provides a dial tone on an available free line.

Dial the number that the call is to be transferred to and press the soft key **"Dial"**.

Consult the called part and press **Xfer** again. The party on hold is transferred to the called party.

To Set Up a Conference Call

Press the **Conf** key on the keypad during a call. This puts the call in progress on hold and switches to an available free line.

Dial the third participant's phone number and press the soft key **"Dial"**. You may talk to the called party while first call is on hold.

Press **Conf** again to join the parties in a conference call.

To terminate the conference call, press the key **Goodbye** on the keypad. The other two conference call participants are also disconnected from the conference call.

You may disconnect either of the parties from the conference call and resume the call with the other party: use the soft key **"Previous"/"Next"** to select the party you would like to disconnect from the conference call and press the soft key **"Drop"**.

11.5 Aastra 9112i

11.5.1 Limitations Specific to Aastra9112i

The functionality of the **call park** feature (see [To Put a Call on Hold](#)) is different on the Aastra 9112i.

The Aastra9112i phone has only one line. Pressing the **Hold** button does not provide a dial tone. Therefore, when parking a call, use the **Xfer** key to receive the dial tone to dial *5.

Please note. Using the **Xfer** key may not always work correctly, as it has been designed for different functionality.

See also section [Limitations and Differences](#).

11.5.2 Feature Codes on Aastra9112i

This section presents the feature codes for **PBX Services accessible during a call** specific to Aastra9112i and serves as a supplement to section [Quadro Feature Codes on Supported IP Phones](#).

Please Note: Using corresponding programmable keys can access some of the PBX services described in the **Feature Codes for SIP Phones** section.

PBX Services	Keys / Soft Keys
Call Hold	Hold
Call Waiting	Swap
Call Blind Transfer	Xfer → <i>dial the number</i> → Xfer
Call Transfer with Consultation	Xfer → <i>dial the number</i> → "Dial" → <i>consult</i> → Xfer
Call Conference	Conf → <i>dial the number</i> → "Dial" → Conf

To Put a Call on Hold

To put a call in progress on hold, press the **Hold** key on the phone keypad. The LED will start blinking, which indicates that you have a call on hold.

To resume the call on hold, press the **Hold** key.

While a call is on hold you can make a second call: press **Xfer** key on the phone keypad. This provides a dial tone on that line enabling you to make a second call.

Please Note: You can put a call on hold and switch directly to another line by pressing the **Swap** key during a call.

To Accept a Second Incoming Call

To accept a second call when you are in a call, press the **Swap** key. Accepting a second call puts the call in progress on hold.

To switch between the calls, press the **Swap** key.

To Blind Transfer a Call

Press the **Xfer** key during a call to be transferred. This puts the call in progress on hold and provides a dial tone on a free line available.

Dial the number that the call is to be transferred to and press the key **Xfer** again. The party on hold is transferred to the called party.

To Transfer a Call with Consultation

Press the **Xfer** key during a call to be transferred. This puts the call in progress on hold and provides a dial tone on an available free line.

Dial the number that the call is to be transferred and press the soft key **"Dial"**.

Consult the called party and press **Xfer** again. The party on hold is transferred to the called party.

To Set Up a Conference Call

During a call, press the **Conf** key on the keypad. This puts the call in progress on hold and switches to an available free line.

Dial the third participant's phone number and press the soft key **"Dial"**. You may talk to the called party while the other is on hold.

Press **Conf** again to join the parties in a conference call.

You may disconnect either of the parties from the conference call and resume the call with the other party: use the soft key **"Up"/"Down"** to select the party you would like to disconnect from the conference call and press the soft key **"Drop"**.

To terminate the conference call just hang up the phone.

11.6 Aastra 9133i

11.6.1 Limitations Specific to Aastra9133i

There are no additional limitations except for those mentioned in section [Limitations and Differences](#).

11.6.2 Feature Codes on Aastra9133i

This section presents the feature codes for **PBX Services accessible during a call** specific to Aastra9133i and serves as a supplement to section [Quadro Feature Codes on Supported IP Phones](#).

Please Note: If the Aastra9133i phone is connected to the Quadro locally, i.e. the phone is configured as a Quadro's local IP extension using the auto-configuration then almost all PBX services described in the **Feature Codes for SIP Phones** section can be accessed by using the corresponding programmable keys.

PBX Services	Keys / Soft Keys
Call Hold	Hold
Call Waiting	Line keys
Call Blind Transfer	Xfer → dial the number → Xfer
Call Transfer with Consultation	Xfer → dial the number → "Dial" → consult → Xfer
Call Conference	Conf → dial the number → "Dial" → Conf

To Put a Call on Hold

To put a call in progress on hold, press the **Hold** key on the phone keypad. The LED of the corresponding line key will start blinking, indicating that you have a call on hold.

To resume the call on hold, press the Line Key with a blinking LED.

While a call is on hold you can make a second call by pressing the key of a free line. This provides a dial tone on that line enabling you to make a second call.

Please Note: You can put a call on hold and switch directly to another line by pressing a free line key during a call.

To Accept a Second Incoming Call

To accept a second call when you are in a call, press the line key with a flickering LED. For example, L1 is in call, L2 is blinking, press Line Key L2. Accepting a second call puts the call in progress on hold.

To switch between the calls, press line keys and put the current one on hold.

To Blind Transfer a Call

Press the **Xfer** key during a call to be transferred. This puts the call in progress on hold and provides a dial tone on an available free line.

Dial the number that the call is to be transferred to and press the key **Xfer** again. The party on hold is transferred to the called party.

To Transfer a Call with Consultation

During a call to be transferred, press the **Xfer** key. This puts the call in progress on hold and provides a dial tone on an available free line.

Dial the number that the call is to be transferred to and press the soft key **Dial**.

Consult the called party and press **Xfer** again. The party on hold is transferred to the called party.

To Make a Call Conference

Press the **Conf** key on the keypad during a call. This puts the call in progress on hold and switches to an available free line.

Dial the third participant's phone number and press the soft key **Dial**. You may talk to the called party while the other is on hold.

Press **Conf** again to join the parties in a conference call.

You may disconnect either of the parties from the conference call and resume the call with the other party: use the soft key **Up/Down** to select the party you would like to disconnect from the conference call and press the soft key **Drop**.

To terminate the conference call just hang up the phone.

12 Appendix 1

This section presents the feature codes for **PBX services accessible at the dial tone** and **Auto Attendant services**.

12.1 Establishing a call

To establish a call, dial the appropriate **Routing Number**. The **Routing Numbers** and the available routes to/from/through Quadro are listed in the **Local Routing Table** configured and managed by the Quadro's administrator. For information about routing rules, please refer to your Quadro's administrator.

To establish a call using **Speed Calling** service dial the pound (#) and the pre-configured Calling Code (a suitable key combination of two digits).

Please Note: You may accelerate establishing a connection by using the pound (#) sign dialed at the end of the number.

12.2 PBX Services Accessible at the Dial Tone

The table below presents the feature codes for PBX services accessible at the dial tone and characterized by starting with the key *.

Services	Keys
Enter Voice Mail System	* 0
Busy Auto redial	* 1
Call Back	* 2
Forwarding Activating/deactivating	* 4
Call Park After putting the call on hold	* 5
Do Not Disturb Activating/deactivating	* 7 2
Block Last Caller (Within 10 sec. after terminating the call)	* 7 3
Getting the line Information	* 7 4
Administrator login	* 7 5
Call Routing Management	* 7 7

12.2.1 To Use Busy Auto-redial

This service is functional for SIP and PBX calls only. For PSTN calls, this feature works as a single redial with no multiple attempts to reach the called destination.

Dial ***1** to redial the last number that you called.

If the called number is busy after dialing ***1**, keep the handset lifted to activate the automatic redialing of the last called number for the time period specified on the **Auto-redial Settings** page (User login→Call Handling→Auto-redial).

The auto-redial terminates as soon as:

- the called number is idle and you hear ring back tones
- the specified **Auto-redial Period** has expired

A beep sound will be heard if auto-redialing is not possible.

12.2.2 To Call Back

Dial ***2**. The system will call back the last caller.

"The dialed number doesn't exist" voice message will be played if call back is not possible.

12.2.3 To Activate Forwarding Service

Dial ***4** and hang up. The Unconditional Call Forwarding service with the settings specified for **Any Address/Other Addresses** on the **Caller ID Based Services** page will be activated (User login→Supplementary Services).

Use the same key combination to deactivate the service.

This feature code will have no effect if unconditional forwarding is not configured for **Any Address/Other Addresses**. The system will ask you to configure the forwarding settings first.

12.2.4 To Switch Do Not Disturb Mode

Dial ***72** and hang up. Your phone will not ring during the period indicated on the **Do Not Disturb Settings** page (User login→Call Handling) and all incoming calls will be directly forwarded to your voice mail if the voice mail service is activated.

Use the same key combination to deactivate the DND service.

12.2.5 To Block Last Caller

Dial *73. The last caller will be blocked and a corresponding entry will be added to the **Caller ID Based Services** (User login→Supplementary Services) page.

Attention: This service can be activated within 10 seconds after call termination. To unblock the blocked party, go to the **Caller ID Based Services** page and disable the **Incoming Call Blocking** service for the blocked address. If no other services are enabled for the address, you may delete the entry from the table.

Blocking the caller with anonymous caller ID such as anonymous@anonymous or a similar address will result in blocking all callers with unknown caller address.

12.2.6 Call Routing Management

Dial *77, to manage the routing entries in the Call Routing Table, i.e. to enable/disable certain dialing rules by dialing key combinations pre-configured on each routing entry. Since multiple routing rules may have the same enabler/disabler key combinations (the same key may be used as an enabler for one routing rule, and as a disabler for another one), dialing a certain key will affect all the pre-configured routing rules.

Please note: If the routing record has an authorization enabled on the enabler/disabler key, administrator's password will be required to be inserted after the key. Once the administrator's password is dialed, system plays a confirmation about the accepted configuration and the state of the optioned routing rule(s) will be modified.

If administrator's password has been inserted incorrectly for 3 times, no status changes will be applied to any of the routing record(s), even to those which have no authorization enabled.

12.2.7 Voice Mail Services

The **Voice Mail Services** are divided into two main parts: **Voice Mailbox** and **Review System Messages**. Each of these parts has a hierarchy that is described below.

*0 Enter Voice Mail Services		
*0 Exit Voice Mail Services	*1 Go to the top of the voice Mail Services Tree	*2 Go one level up in the Voice Mail Services Tree

* 0 Enter Voice Mail Services									
1 Voice Mailbox			3 Review System Messages						
1 Send a Message or Leave a Reminder	2 Play First Message	3 Get Date/Time info	1 Greeting Message (GM)	3 Incoming Blocking Message (IBM)	4 Outgoing Blocking Message (OBM)	5 Your Name	6 Out of Office Message (OFM)		
4 Play Previous Message	5 Play Current Message	6 Play Next Message	1 Listen to current GM	1 Listen to current IBM	1 Listen to current OBM	1 Listen to current Name	1 Listen to Current OFM		
7 Print the attached FAX (and press START on the FAX machine)	8 Play Last Message	9 Delete Current Message	2 Record a New GM	2 Record a New IBM	2 Record a New OBM	2 Record a New Name	2 Record a New OFM		
*	0 Reply or Forward a Message	#	3 Restore Default GM	3 Restore Default IBM	3 Restore Default OBM	3 Restore Default Name	3 Restore Default OFM		
			# Stop Recording or Playback						

The **Voice Mailbox** has the following sub-hierarchy in the **Reply or Forward a Message** and **Send a Message or Leave a Reminder** menu options:

0 Reply or Forward a Message		
0 Call Back immediately	1 Reply by Voice Mail	2 Forward a Message
	Dial 1 to mark the message as Urgent, or press pound to assign the Normal priority.	Dial Destination Number
	# Record a Message	# Record a Message
		Dial additional Destination Number
		# Record a Message
		Dial 1 to mark the message as Urgent, or press pound to assign the Normal priority.

1 Send a Message or Leave a Reminder		
Dial Destination Number		# Leave a reminder
# Record a Message	Dial additional Destination Number	Dial 1 to mark the message as Urgent, or press pound to assign the Normal priority.
	# Record a Message	
Dial 1 to mark the message as Urgent, or press pound to assign the Normal priority.		

Please Note: This service is restricted to sending messages to PSTN destinations. Messages will be successfully received by the destination if all the following conditions fit:

- The connection to the destination is successful;
- The voice mail service is enabled on the destination;
- There is enough space in the voice mailbox of the destination;
- The duration of the forwarded/replied message is less than the maximal voice mail duration set up by the destination.

Voice Mail Services for Incoming Calls:

Calling to the extension's Voice Mailbox		In call queue
0 (during the greeting message) Calling to the Zero Out destination	# Skip the greeting message and start Voice Mail recording	0 Leave the call queue and record a Voice Mail

12.3 Feature Codes on Auto Attendant

For external IP calls addressed to the Auto Attendant or incoming calls from FXO lines routed to the Auto Attendant or local calls to Auto Attendant, the following key combinations are available to access and manipulate within Auto Attendant services:

Incoming call to Auto Attendant Services or dial locally	Keys
Extensions Menu - establishing a connection to an extension on the called Quadro	(already in)
Remote Enquiry - establishing a connection to the mailbox of an extension on the called Quadro	* 0
Call Relay Menu - mainly for external calls (IP/FXO or IP/ISDN). Local calls are also allowed. This service allows you to avoid hanging up and redoing the entire dialing sequence. If Quadro detects an error in the dialed number or you decide to cancel the call and start a new one, enter the combination * * to interrupt the call and get an invitation to make a new one.	* 2
"* *" digit combination is applicable: <ul style="list-style-type: none"> During the dialing, After ring tones start, After call establishment. Under the following restrictions: <ul style="list-style-type: none"> This feature can be used when accessing the AA from the PSTN line to make IP or local calls This feature can be used when calling to PSTN through the AA This feature is not available on the second Quadro Auto Attendant (calling from one Auto Attendant to another) 	
Remote Configuration Menu – allows remote enabling/disabling of Unconditional Call Forwarding service for Any Address/Other Addresses on the extension.	* 4
Non Permanent Call Back – allows PSTN callers registered in the Authorized Phones Database to change the callback destination for a one-time callback. After the caller hangs up, the Quadro will call back to the newly specified number. This change will not be logged into Authorized Phones Database.	* 5
Permanent Call Back – allows PSTN callers registered in the Authorized Phones Database to reconfigure Authorized Phones Database entries by modifying the caller's and/or callback numbers. The caller will then be able to initiate a callback only by calling from the newly specified caller number.	* 6
Call Routing Management Menu - allows managing the routing entries in the Call Routing Table, i.e. to enable/disable certain dialing rules by dialing key combinations pre-configured on each routing entry.	* 7
Extensions Directory - accesses Quadro extensions by spelling the extension's user name using keypad on the phone	#

Please note: For more information on Quadro's Auto Attendant Services, please refer to **Manual III: Extension User's Guide** of the corresponding release.

12.3.1 Administrator Login

The administrator login allows only modification of the auto attendant (AA) greeting message, menu message and Universal Extension Messages. After dialing ***75**, use key **1** to enter and review the auto attendant greeting message, key 2 to enter and review the auto attendant menu message, and use key **3** to enter the Universal Extension Messages menu. The key combinations below are available to modify the auto attendant greetings.

* 7 5 Administrator Login						
1 Auto Attendant Greeting	2 Auto Attendant Menu Message	3 Universal Extension Messages				
		1 Greeting Message (GM)	3 Incoming Blocking Message (IBM)	4 Outgoing Blocking Message (OBM)	5 Your Name	6 Out of Office Message (OFM)
		1 Listen to Current GM	1 Listen to Current IBM	1 Listen to Current OBM	1 Listen to Current Name recorded	1 Listen to Current OFM
		2 Record a New AA Greeting	2 Record a New AA Menu Message	2 Record a Universal GM	2 Record a Universal IBM	2 Record a Universal OBM
		3 Restore Default AA Greeting	3 Restore Default AA Menu Message	3 Restore System Default GM	3 Restore System Default IBM	3 Restore System Default OBM
# Stop Recording or Playback	# Stop Recording or Playback	# Stop Recording or Playback GM	# Stop Recording or Playback IBM	# Stop Recording or Playback OBM	# Stop Recording or Playback Name Message	# Stop Recording or Playback OFM
* 0 Administrator Logout						